



FRONT MOUNTED ALUMINIUM PROFILE

- 1** FIX THE BAR WITH THE SCERWS

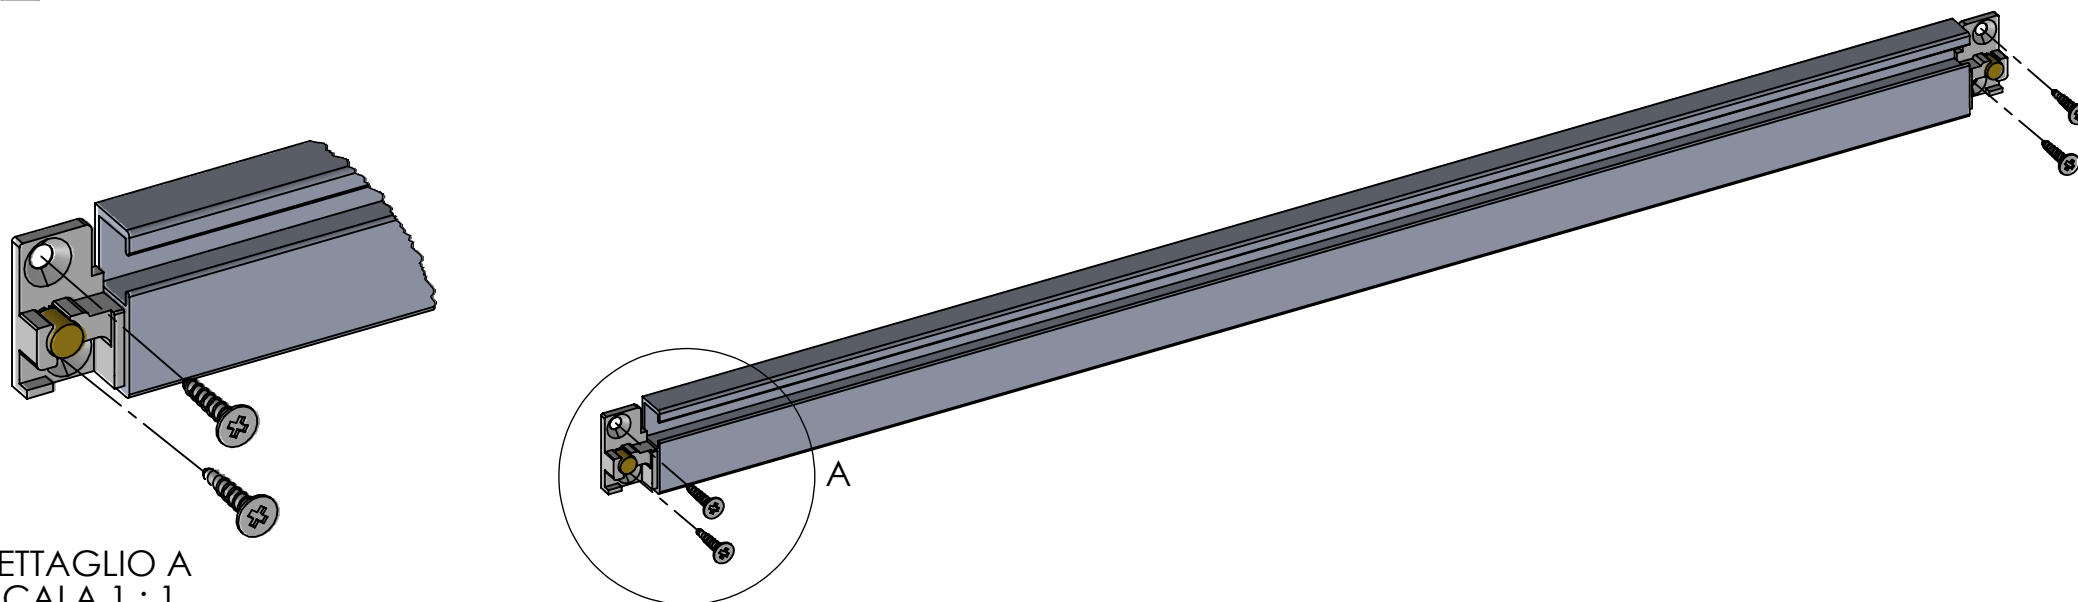


2

INSERT THE KNOB
FROM THE SIDE
OF THE BAR

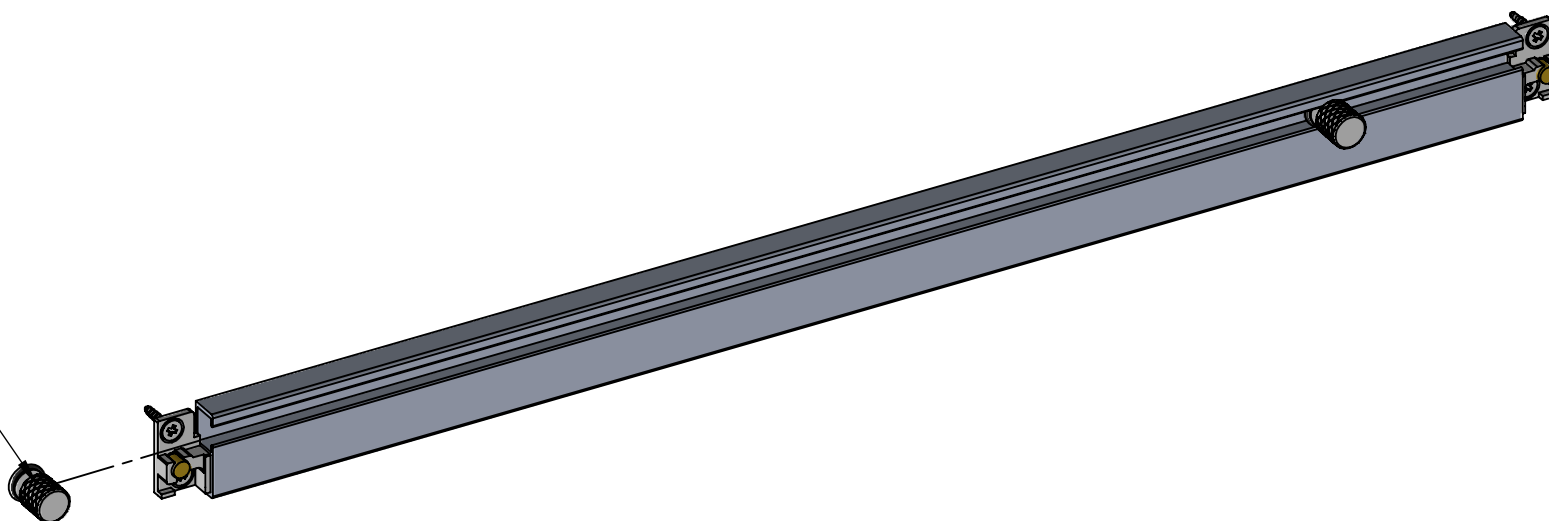


3

COVER THE FIXING POINT
WITH THW MAGNETIC HANDCAP

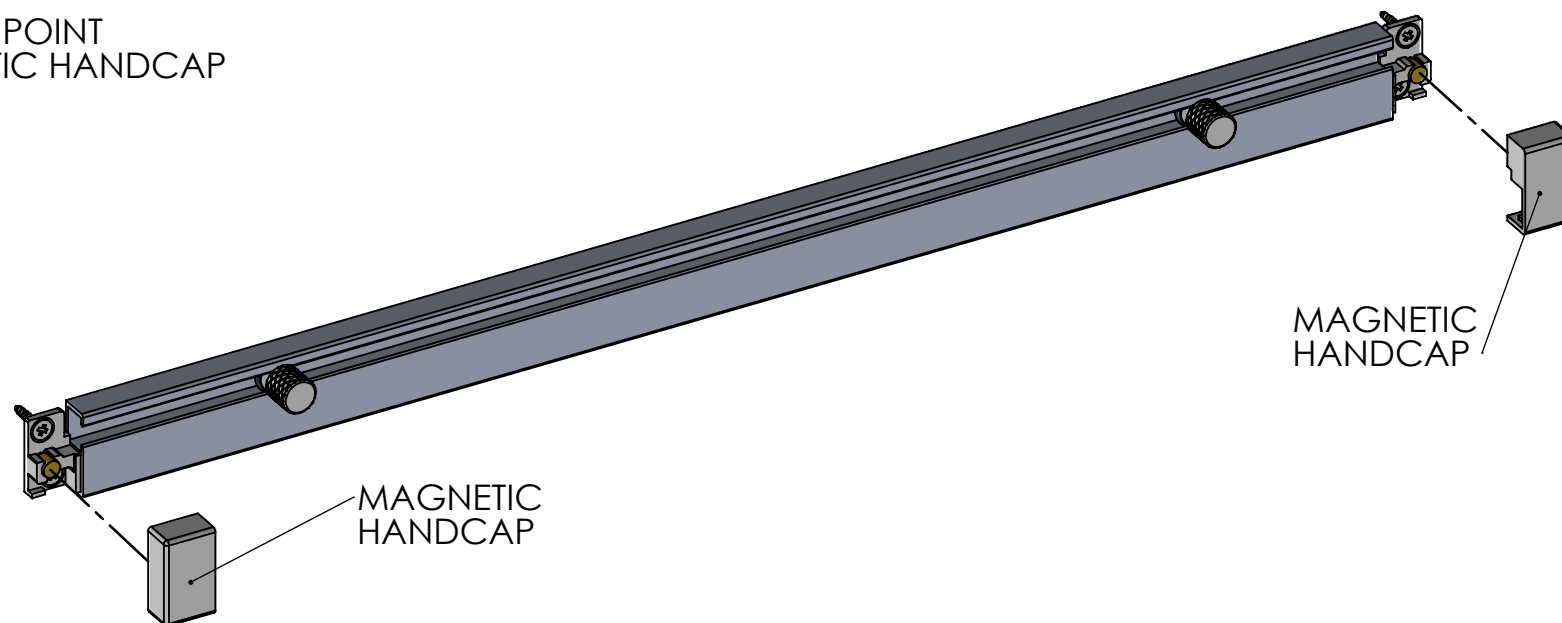


4

INSERT THE ACCESSORY IN THE KNOB
FROM THE SIDE IN THE SHAPED HOLE

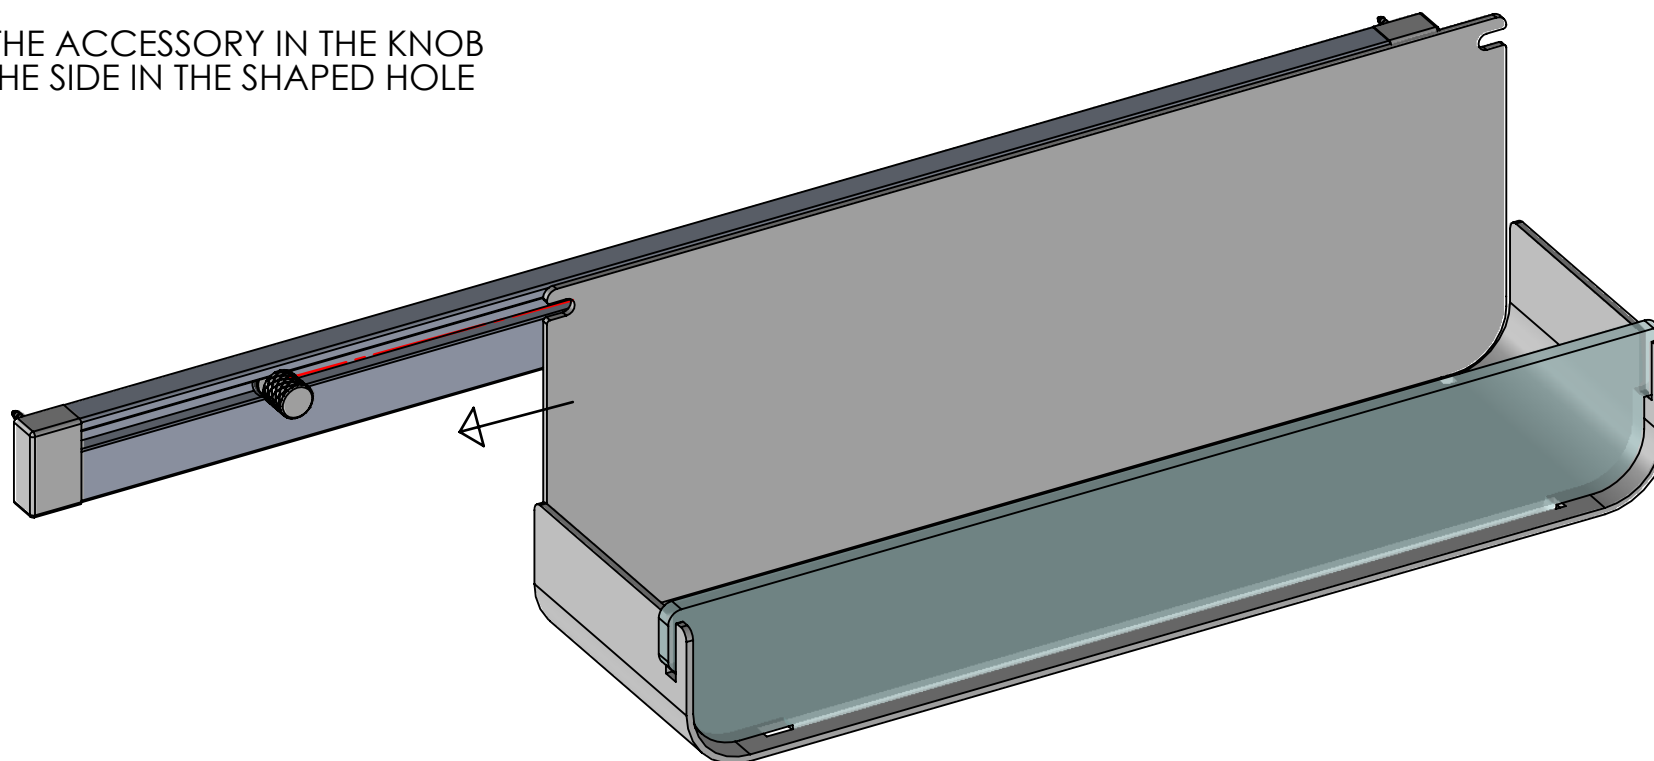

5

SLIDE THE SECOND KNOB IN THE SHAPED HOLE

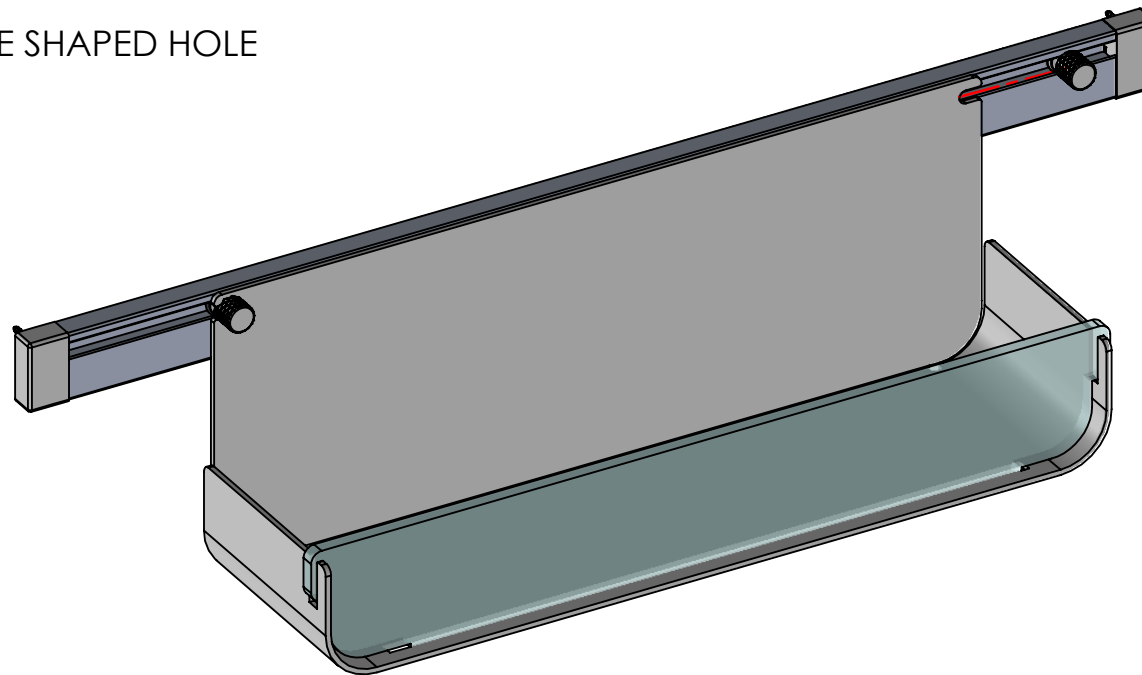

6

FASTEN THE KNOB TO LOCK THE SHELF

